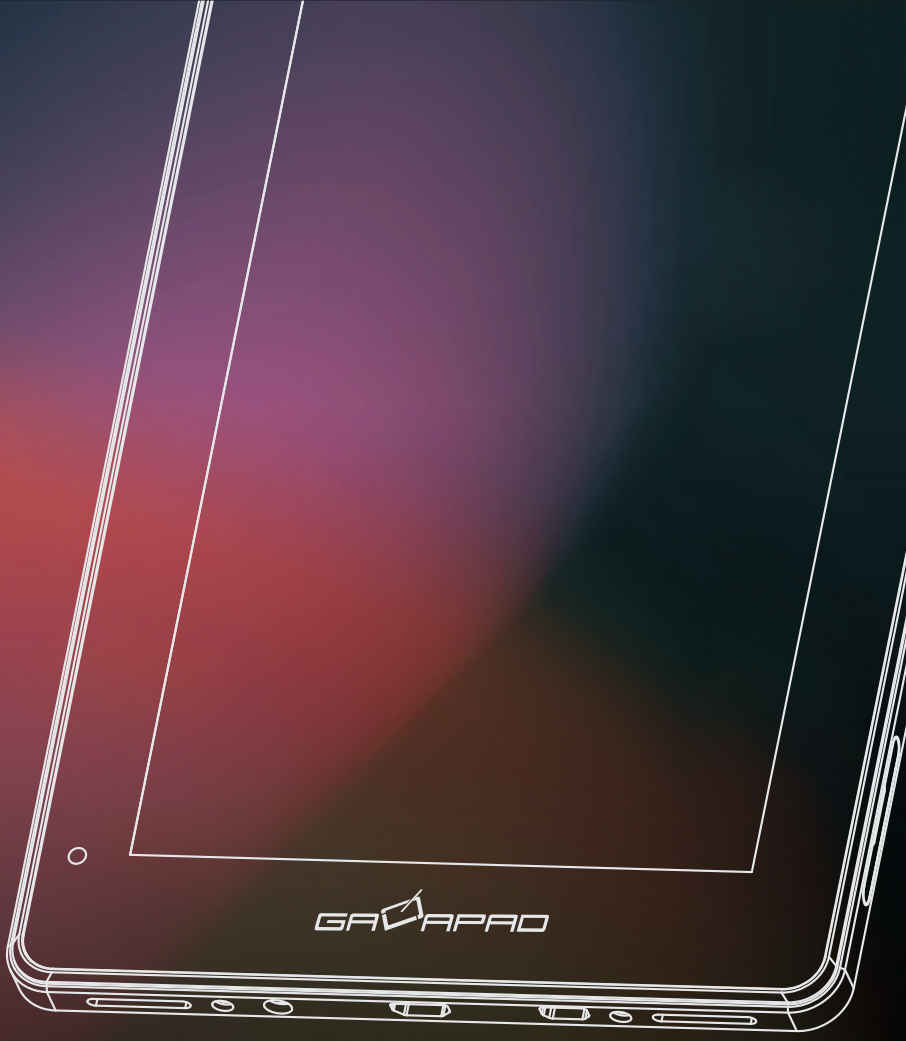

GAMEPAD

Quick Start Guide

English Version V 1.0

Before you do anything else, please read this

Charge the tablet

Your tablet hasn't been charged yet. Please use the supplied power adapter to do a full charge before using it. Also, please don't try to take your tablet apart. (If you do, it may invalidate your warranty.)

Choose a rate plan wisely

Depending on how you use your tablet, it can use up a lot of Internet bandwidth really quickly. Before you use your tablet, we strongly recommend that you talk to your telecom company about Wi–Fi data rates.

Set up your tablet

The first time you turn on your tablet,Be sure to sign in to your Google™ Account so you can use Google apps such as Gmail™ and Android Market™ on your tablet.

Inserting a MicroSD card

Your tablet already has internal storage for saving data and files. But if you want even more storage space, you can purchase and use a microSD card with your tablet.

Insert your microSD card into the storage card slot with its gold contacts facing down, and push it in until it clicks into place.

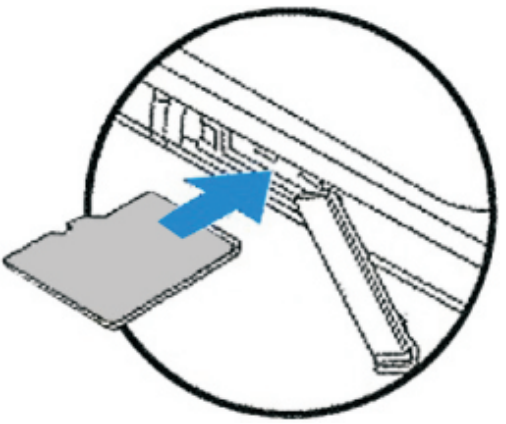

* Brand and product names mentioned are trademarks of their respective companies. All specifications are subject to change without notice. Products may not be available in all markets.

Get to know your tablet

Your Home screen

Almost anything you want is only a swipe and a tap away on your Home screen. Smoothly roll around the screens to see your favorite apps or widgets that show live updates of social network feeds, weather forecasts, email, and more.

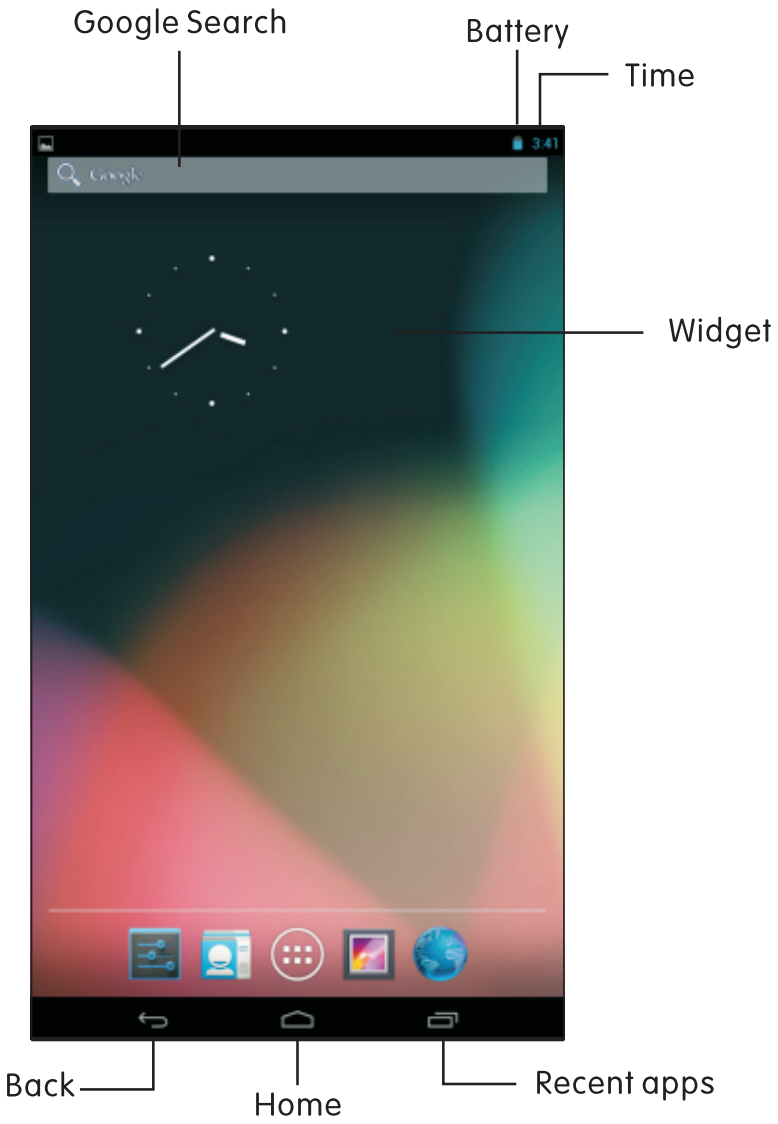

Personalize your tablet

Customize your tablet just the way you want it. You can:

- Change the wallpaper, skin, widgets, apps, or shortcuts.
- Choose a sound set that uses different sounds for your notifications such as incoming messages and calendar reminders.
- Personalize the lock screen. Choose from a selection of lock screen styles.

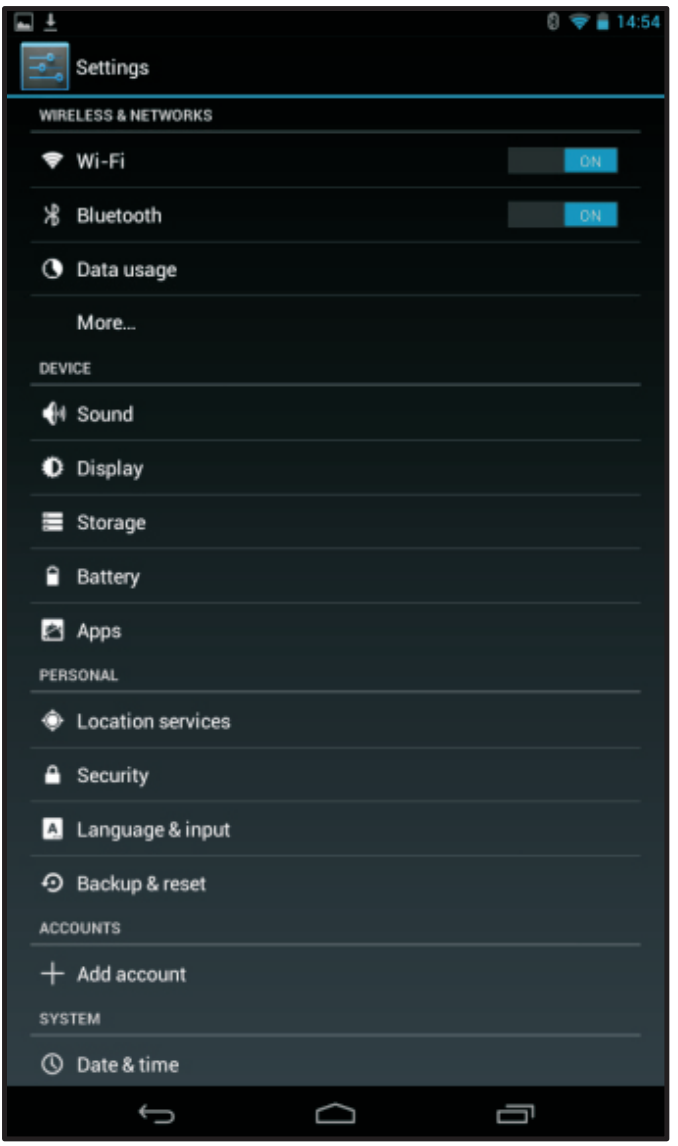

Lock screen

When your tablet becomes idle, it turns the display off and goes to sleep mode to save battery power. Simply press POWER to turn the display back on.
You 'll then see the Lock screen. To unlock the screen, you can:

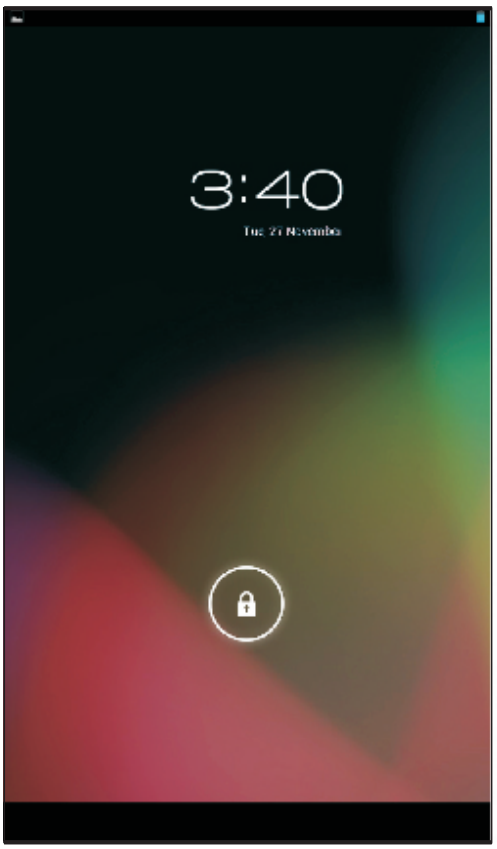

1.Drag the circle lock ring left or right to unlock.

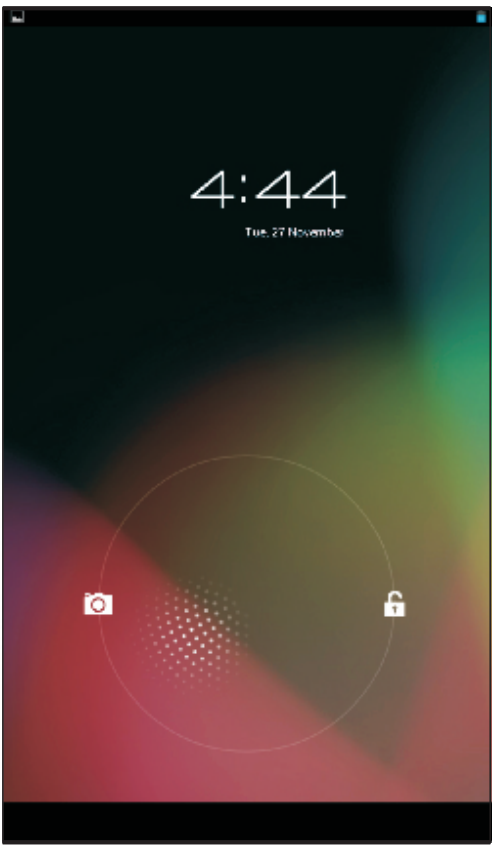

2.Drag the circle lock ring left to unlock the screen and directly go to that app.

Connection Settings

This section will show you how to adjust detailed settings for your data, Wi–Fi and Bluetooth connections.

Item	Description
Airplane mode	Disables all wireless connections so you can safely use this device onboard an aircraft.
Wi-Fi	Turns the Wi-Fi function on or off.
Wi-Fi settings	Sets up and manages your wireless access points.
Bluetooth	Turns the Bluetooth function on or off.
Bluetooth settings	Manages your Bluetooth connections, sets a device name and discoverability.
VPN settings	Sets up and manages Virtual Private Networks.

Connecting to a PC

If you wish to transfer information between your tablet and your computer, you can connect your tablet to a PC using the supplied micro USB cable. Plug the USB sync cable into the micro USB port on your tablet. Plug the USB client connector into an available USB port on your computer.

Adjusting Bluetooth settings

You can use Bluetooth to exchange information between your tablet and other mobile devices.

Bluetooth connections

For all Bluetooth settings, tap Apps > Settings > Wireless & networks > Bluetooth settings. Here you can switch Bluetooth on or off, set a device name and discoverability. Tap search for devices to scan for available devices.

To connect to a device, tap the device in the list of available devices. You may be asked to enter a PIN on both devices to establish the connection.

Micro–HDMI Connection

Connect an micro HDMI (Type D) cable to your tablet then plug the other end of the cable into a TV or monitor with an HDMI port.

Note: When using the micro HDMI port to connect the tablet to an external device, the tablet's screen will switch orientation to landscape to mimic the aspect ratio of the external device.

Using the browser

To start browsing, tap a bookmark ★ from the bookmark widget on the Home screen, or open the Application menu and select Browser. To enter a website address, tap the address box at the top of the page. Enter the address using the keyboard and tap Enter or the Go arrow.

To view your browsing history, bookmarks or frequently visited sites, open the browser then tap the bookmark icon in the top–right corner.

You may open multiple tabs. When a page is open, press the small tab with a (+). Simply tap one of the tabs across the top of the screen to switch pages. New tab



Pinch to zoom in or out of pages. Tap and hold an item on a page to open a contextual menu.

Security features

Configure lock screen

Choose settings for unlocking your screen.

- From the Home screen, touch Apps ➔ Settings ➔ Security.
- Touch Screen lock for these settings:
  - **None:** Disable all lock settings, so the screen will never lock.
  - **Slide:** The default lock level.
  - **Pattern:** A screen unlock pattern is a touch gesture you create and use to unlock your device. Follow the prompts to create or change a screen unlock pattern.
  - **PIN:** Select a PIN to use for unlocking the screen.
  - **Password:** Create a password for unlocking the screen.
- Touch Use visible pattern to show the unlock pattern as you draw it to unlock the screen.
- Touch Owner info to enable display of your own text on the lock screen. Touch the text field to enter text for the display.

Backup & reset

1.Open the Settings app.

2.Select the Backup & reset option.

3.Select Factory data reset.

4.Select Erase everything.

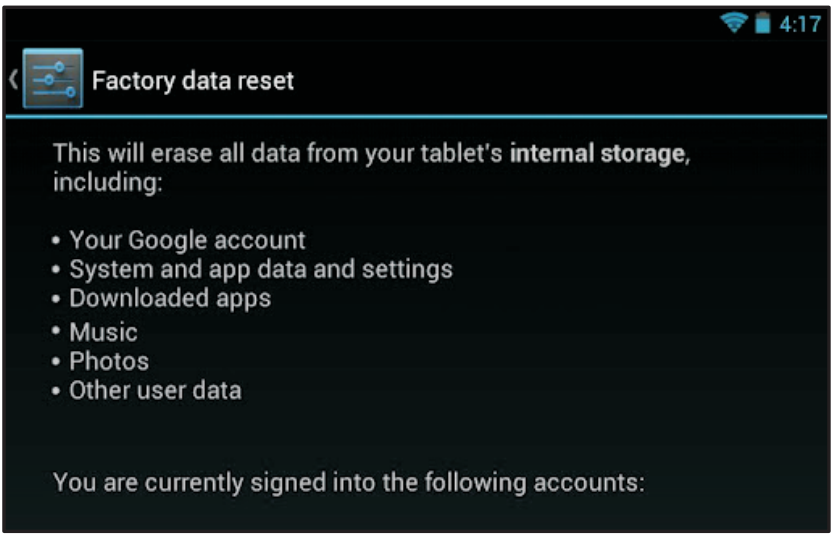
4:17
Factory data reset
This will erase all data from your tablet's internal storage, including:
• Your Google account
• System and app data and settings
• Downloaded apps
• Music
• Photos
• Other user data
You are currently signed into the following accounts:

Connect to the Internet

Using Wi–Fi

- From the Home screen, tap the time in the upper right corner and then tap > Settings > Wireless &networks.
- Switch the Wi–Fi check box to turn Wi–Fi on.
- Tap Wi–Fi settings, and then choose a Wi–Fi network to connect to.

Fast browsing

Enjoy fast web browsing on your tablet. With the powerful processor, you can be sure that viewing web pages will be smooth. Also, with Adobe® Flash® support, no websites are out–of–bounds.

On the Home screen, tap Internet to open the web browser.

Use your Camera

The Camera app is a combination camera and camcorder.To take pictures and videos, first touch the Camera icon on or all apps screen.

When Camera opens, you can:

- Take a picture: Touch the blue button.
- View the most recently taken picture: Touch the thumbnail near the blue button.

You can now share the picture by touch the share icon on the upper right corner .

To view this picture and others in the Gallery app, touch the picture.

Record in HD

Capture those priceless moments in HD and share them with your loved ones.

- From the camera screen, tap > Camcorder.
- Tap to start recording; tap again to stop recording.

Playing music and video

Music

Use Music to listen to music and other audio files that you download or copy from your computer.

Tap Apps > Music to open the application.

The Shuffle All cover to play a random selection, or swipe through the albums and tap to view a list of tracks. Tap the play symbol or a track to start playback. Tap the Music icon to return to the previous view.

To change how your music is displayed, tap the arrow next to New and recent.

Note: You can return to the Home page while playing music; a Music icon is displayed with the notification icons. Tap this icon to control playback.

Playing video

Your tablet comes supplied with a variety of programs that you can use to enjoy multimedia content.

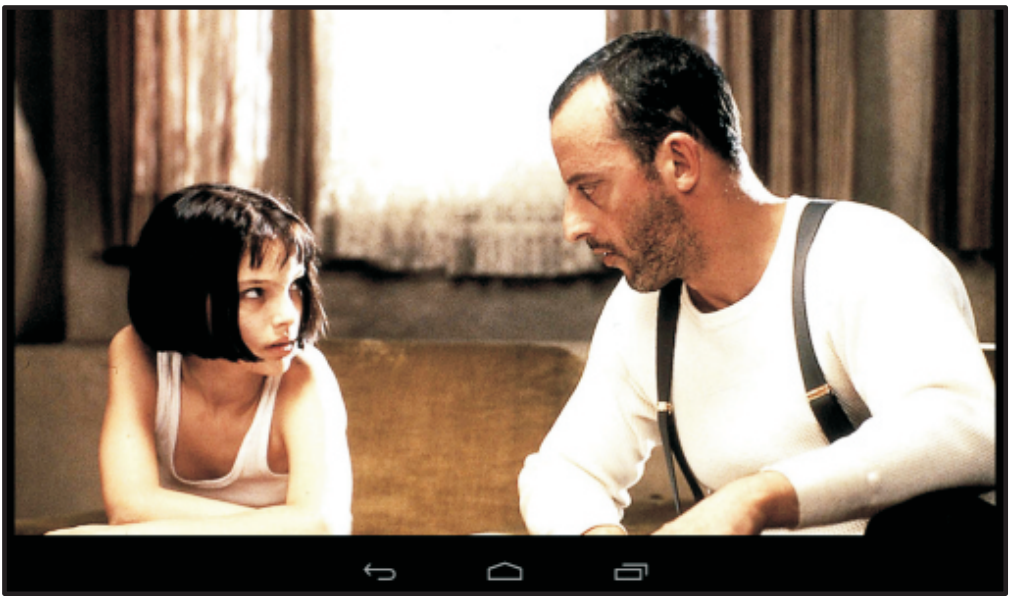

Manage downloads

Files, apps, and other items you download from Gmail, Email,Android Market, or in other ways are stored in your device's internal storage. You can use the Downloads app to view, reopen, or delete what you've downloaded.

Some mobile networks restrict the size of the files you can download, to manage the demands on their networks or to help you avoid unexpected charges.

Downloaded files are stored in the Download directory that's visible when your device is connected to a computer. You can view and copy files from this directory.

Open Downloads and manage downloaded files

- Touch the Downloads icon from a Home or All Apps screen.
- Touch an item to open it.
- Touch headings for earlier downloads to view them.
- Check items you want to share. Then touch the Share icon and choose a sharing method from the list.
- Check items you want to delete. Then touch the Trash icon .

Email

If you signed into your Google Account when you first set up your tablet, you'll be able to send and receive Gmail messages. From the Home screen, just tap > Gmail.

Use the Mail app to set up and manage your other email accounts such as POP3, IMAP, or Exchange ActiveSync.

- From the Home screen, tap > Mail.
- On the Choose a mail provider screen, choose the type of email account to set up.
  If you don't see this screen, press > New account,and then choose the type of email account.
- Enter your email address and password.
- Follow the onscreen instructions to finish setting up your email account.You can check your email messages in just one place without having to switch to different accounts. Just choose the All accounts inbox.

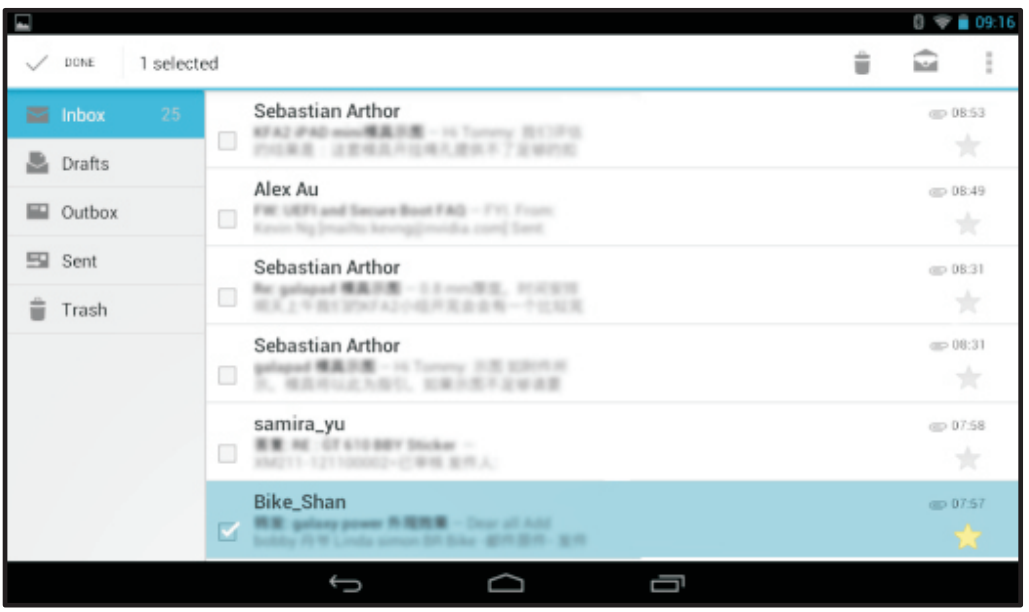

Viewing photos and videos

Use Gallery to view, capture, and manage pictures and videos.

- From the Home screen, touch Gallery .
- Choose items to display by making selections from the menus in the Application bar: By album, By time, By location, or By tags, and Images and videos, Images only or Videos only.
- Options depend on the type of item:
  - Videos: Touch to play, then touch and to control playback.
  - Pictures: Touch to see a slideshow of all displayed pictures, .
- While viewing, touch Menu for options, including:
  - Details: Provides details about the photo or video such as Title,Time, Location, Width, Height, and File Size.
  - Rotate Left: Rotate the picture counter–clockwise 90 degrees.
  - Rotate Right: Rotate the picture clockwise 90 degrees.
  - Set picture as: Assign a photo as a Contact photo, Lock Screen, or Wallpaper

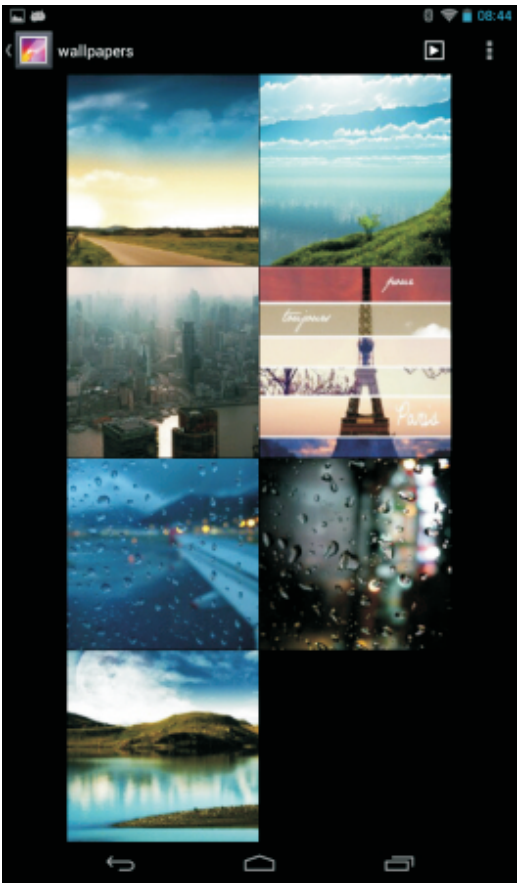

Other applications

Setting the date and time

To set the date and time, tap Apps > Settings > Date & time.
Tip: If you travel frequently or live in an area that uses daylight saving time, and have mobile network access, activate Automatic date & time from this menu. Your tablet will set the date and time based on information it receives from the network.

Setting alarms

There are two predefined alarms on your tablet by default. To add or edit alarm settings, tap Clock in the application menu and tap Set alarm. Tap Add alarm to create a new alarm, or tap the check box next to a preset alarm to turn it on or off.
Tap a preset alarm to edit it. You can:

- Turn the alarm on or off.
- Set the alarm time.
- Set which days to repeat the alarm.
- Set a ringtone.
- Enable or disable vibrate.
- Give it a label (i.e., meeting).

Manage your Calendar

Record events and appointments to manage your schedule.

Tip: A Calendar widget is available in Widgets.

- From the Home screen, touch Apps ➔ Calendar.
- Touch Day, Week, or Month in the Application bar to choose a calendar view.
- Touch Menu for options:
  - Refresh: Synchronize your device's calendar with your Google account.
  - Settings: Configure General preferences, and set synchronization for accounts you have set up on the device, or to add an account to your device.
  - Hide controls/Show controls: Choose whether to display navigation controls.
- Use other tools in the Application bar:
  - Touch Home to return to the current date.
  - Touch Search to return to the current date.
  - Touch Add to create a new event.

Status & notification icons

The upper side of the System bar shows the current time, with network, battery status and other details, including these icons.

Wi–Fi Active: Wi–Fi is connected, active, and communicating with a Wireless Access Point (WAP).

Bluetooth Active: Bluetooth is turned on.

USB Connected: Connected to a PC using a USB cable.

Download in progress: An application is being downloaded to the device.

Music Player: A song is playing. Touch the Music icon or Status details to see the song title and controls.

New Email Message: You have new email. Touch the icon for additional information.

Airplane Mode: Airplane Mode is active. You can use many of your device's features, but cannot access online information.

Updates Available: Updates to the applications you have downloaded are available.

Download Successful: A recent application download or update completed uccessfully.

Searching for GPS: Device is searching for a GPS signal.

Battery saving tips

Turning off wireless functions

- From the Home screen, tap the time in the upper right corner, and then tap > Settings.
- Tap Wireless & networks.
- Turn off wireless functions such as Bluetooth,Wi–Fi, when they're not in use.

Battery Charging Status

Low battery Charging  Full
WWW.GALAPAD.NET
android technology
a b g WiFi n CERTIFIED
GPS
POWERED BY
NVIDIA TEGRA